




Cord Installation and Use Instructions



1. At eyelet tab, flex open one side wall and insert cord end through hole in divider.

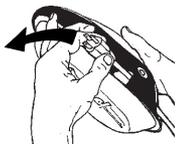

2. Flex open opposite side wall and pull cord end all the way through and out of the opening.



3. Pull cord halfway through unit. (Example: For 50 ft. cord, pull 25 ft. through.) Cordpro will then be in middle of cord.



4. Grip Cordpro in center opening and wrap one half of cord at a time onto unit. Each half of cord will automatically fall into its own compartment.

FOR USE WITH CORDS, wind cord halves in **SAME direction**. (Both halves will unwind at the same time.)


FOR USE WITH HOSES, wind each half in **OPPOSITE directions**. (Both halves will then only unreel from one side at a time.) This prevents kinking of the hose.



5. To use . . . plug cord into outlet, lay Cordpro on the ground and pull end of cord to needed appliance or tool. Cordpro will unreel just the right length of cord as it slides with you!

AVOID OVERHEATING

All cords generate heat when used. Know cord and appliance ratings before use.

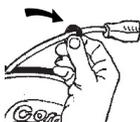

New cords are labeled for maximum rated power.

Electrical appliances are labeled for rated power consumption.

CAUTION: DO NOT USE CORD ABOVE RATED CAPACITY

CORD LENGTH 125 volts	CORD GAUGE & TYPE	CORD FULLY EXTENDED	CORD ON REEL
100' / 30 m	16 / 3	9 AMP.	4.5 AMP.
50' / 30 m	12 / 3	17 AMP.	8.5 AMP.

DO NOT EXCEED 1/2 CORD RATING IF USED COILED.

BurkTek Incorporated

PO Box 10736 • Kansas City, MO 64188
800.700.6784 • www.cordpro.com

US Patent No. 5,992,787, International
and Additional Patents Pending
© 2001-2007 BurkTek Inc.