

## Cord Installation and Use Instructions

(CP-100 unit shown in images)



**1.** At eyelet tab, flex open one side wall and insert a cord end through the hole in the divider.



**5.** To use ... plug cord into outlet, lay Cordpro on the ground and pull end of cord to needed appliance or tool. Cordpro will unreel just the right length of cord as it slides with you!



2. Flex open the opposite side wall and pull the cord end all the way through and out of the opening.



All cords generate heat when used. Know cord and appliance ratings before use.



3. Pull the cord halfway through the unit. (Example: For 50 ft. cord, pull 25 ft. through.) Cordpro will then be in the middle of the cord.



New cords are labeled for maximum rated power.

Electrical appliances are labeled for rated power consumption.



**4.** Grip Cordpro in center opening and wrap cord ends together initially and then separately (if desired) in the exact **SAME** direction. Each half of the cord will slide into its own compartment.

CAUTION: DO NOT USE CORD ABOVE RATED CAPACITY

CORD	CORD	CORD	CORD
LENGTH	GAUGE	FULLY	ON
125 volts	& TYPE	EXTENDED	REEL
100' / 30 m	10 / 3	20 AMP.	10 AMP.
100' / 30 m	12 / 3	15 AMP.	7 AMP.

DO NOT EXCEED 1/2 CORD RATING IF USED COILED.

Made in USA

FOR USE WITH CORDS, wind cord halves in the <u>SAME direction</u>. (Both halves will unwind at the same time.)

FOR USE WITH HOSES, wind each half in <u>OPPOSITE directions</u>. (Both halves will then only unreel from one side at a time.) This prevents kinking of the hose.

Patent No. 5,992,787 and Additional Patents Pending